

## **Pushbutton FF Serie**

Codes: EK-ED2-TP-... (with LED and thermostat) EK-F32-TP-...







Datasheet STEKED32TP\_EN

KNX device for switching and control of single loads or groups of loads and room temperature regulation. It has to be used in KNX installations for control of homes and buildings.





**REFLEKED2TP** 

#### **Description**

The ekinex® pushbutton of FF series is a KNX S-mode device for on/off switching of loads, dimming of lighting devices, controlling of motor drives or other programmable switching and control functions. The integrated temperature sensor allows the use as a room or zone temperature controller. It is equipped with an integrated KNX bus communication module and is designed for wall installation on flush-mounting box. Each channel can be freely configured to carry out 1 or 2 bus functions and is provided with programmable LED (blue/green or red/white) e.g. as a staus feedback or orientation nightlight. Pressing a rocker, the device sends on the bus a telegram, which is received and executed by one or more KNX actuators depending on the configuration carried out. The device is powered by the KNX bus line with a SELV voltage 30 Vdc and does not require auxiliary power.

## **Versions**

Code	LED	Montaggio	
EK-ED2-TP	blue / green	with frame of the form or flank series	
EK-ED2-TP-RW	red / white		
EK-ED2-TP-BG-NF	blue / green	without frame ('NF series) with black side profile	
EK-ED2-TP-RW-NF	red / white		
EK-ED2-TP-BG-NFW	blue / green	without frame ('NF series) with white side profile	
EK-ED2-TP-RW-NFW	red / white		
EK-E32-TP	n.a. *	with frame of the form or flank series	
EK-E32-TP-NF	n.a. *	without frame ('NF series) with black side profile	
EK-E32-TP-NFW	n.a. *	without frame ('NF series) with white side profile	



Note. The set of rockers and the optional frame for completing the device have to be ordered separately. For more information, see also the ekinex® product catalog or browse www.ekinex.com

#### Main functional characteristics

- On/off switching of single loads or groups of loads
- Dimming of lighting devices
- Control of motor drives (for roller shutters, blinds, curtains, etc.)
- Room temperature regulation
- Logic functions
- Sending on the bus of values (temperature, brightness, etc.)
- Switching to forced functioning (lock)
- Recalling and saving of scenes
- Measuring of room temperature and light brightness through integrated sensors
- Different functions programmable for short pressure / long pressure of a rocker
- Status feedback or orientation nightlight through 2-colour programmable LEDs \*
- \*) Only for EK-ED2-TP-... versions

#### Other characteristics

- · Housing in plastic material
- Wall installation in flush mounting box
- Protection degree IP20 (according to EN 60529)
- Classification climatic 3K5 and mechanical 3M2 (according to EN 50491-2)
- Pollution degree 2 (according to IEC 60664-1)
- Weight 80 g (with mounting support)
- Dimensions 82 x 79 x 19 mm (WxHxD)

#### **Technical data**

- Power supply 30 Vdc from KNX bus line
- Current consumption < 15 mA
- Power from bus < 360 mW

#### **Environmental conditions**

- Operating temperature: 5 ... + 45°C
- Storage temperature: 25 ... + 55°C
- Transport temperature: 25 ... + 70°C
- · Relative humidity: 95% not condensing

## **Delivery**

The delivery of the pushbutton includes a metallic support for round flush-mounting box (of 60 mm diameter), the fixing screws (2 pairs) and the KNX terminal block for connection of the bus line.

## Accessories for the pushbutton

The pushbutton is completed through a separate order of:

- a set of rockers that allows the use it as 2-fold or 4-fold pushbutton;
- a square frame of the ekinex® form or flank series (not for the 'NF - No Frame versions).

# **Rockers**


Three-positions rockers with central neutral position have to be mounted on the pushbutton. Pushing one side of a rocker (for example the upper one), the pushbutton sends on the bus a telegram for switching on, increasing the brightness of luminaires or raising the blinds, while pushing the other side (for example the lower one), it sends a telegram for switching off, reducing the brightness of luminaires or lowering the blinds. Each channel is equipped with LEDs which can be freely programmed as status feedbacks of the loads and as orientation nightlight.

Code set of rockers 1	Appea- rance <sup>2</sup>	Nr. and type of rockers	Rockers modu- larity [mm]
EK-TRV-xxx		2 rectangular	40 x 80
EK-TQQ-xxx		4 square	40 x 40
EK-TRO-xxx		4 rectangular	80 x 20

- 1) To be completed with the extension for colour and material
- 2) Available in plastic material, brushed aluminium and Fenix NTM®

#### Note on installation of rockers

To assemble the rockers on their seats, the fixing teeth must be aligned vertically.

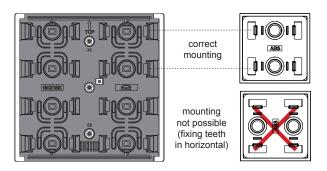

#### **Frame**

The pushbutton can be completed by a square 1-fold frame of the flank or form series (and not for 'NF versions). Using the templates EK-DFO and EK-DFL it is also possible mounting side by side two devices of FF series both completed by square frames respectively of form or flank series.

Code *	Material	Package		Dimens. [mm]
EK-FOQ-GAx	plastic		1 pcs.	86 x 86
EK-FOQ-GBx	metal		1 μcs.	00 X 00
EK-FLQ-GAx	plastic		1 000	94 x 80
EK-FLQ-GBx	metal		1 pcs.	94 X 60

 $(\ensuremath{^{\star}}\xspace)$  To be completed with the extension for colour and material


## Mounting

The device has degree of protection IP20, and is therefore suitable for use in dry interior rooms. In order to mount the device, carry out the following steps:

- fix the metallic support (5) with the pair of screws (6) on the flush-mounting box (7) equipped with fixing holes at 60 mm distance;
- depending on the device version, snap a square frame (4) of the form or flank series, inserting it from the rear of the pushbutton (3);
- enter the bus terminal block, previously connected to the bus cable in its slot on the rear side (see also: "Connection of the KNX bus line"). At this point it is recommended to carry out the commissioning of the device (see also "Configuration and commissioning") or at least the download of the physical address;
- fasten the device (3) on the supplied metallic support (5) with the pair of screws (2).

- insert pushbutton (3) in the metallic support (5). While mounting the device, please follow also the indication TOP (arrow tip pointing up) on the front side of the device:
- 6. snap the rockers (1) for the operation of the device.

The pushbutton has to be mounted on a round or square flush-mounting box with distance between fixing holes of 60 mm. If necessary, the metallic support for mounting on the wall box can also be ordered separately using the code EK-SMQ-71.

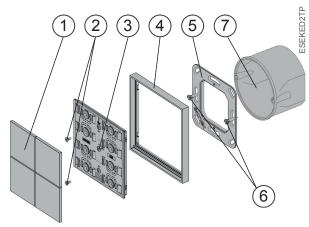


- 1) Rockers (to be ordered separately)
- 2) Fixing screws (for device)
- 3) Devic
- 4) Frame of form or flank series (to be ordered separately)
- 5) Metallic mounting support
- Fixing screws (for metallic support)
- 7) Flush-mounting box (not delivered by Ekinex)



Note. Programming pushbutton and LED are accessible from the front side of the device. It is better addressing the device before the final assembly of rockers and frame. Once the addressing has been performed, the device configuration can be later downloaded without pressing the programming pushbutton

## Mounting position

If the integrated sensor is used for temperature regulation, the device has to be installed preferably lon an internal wall at the height of 1,5 m and at least 0,3 m far from doors. The device can not be installed close to heat sources such as radiators or houshold appliances or in position subjected to direct sunlight. If necessary, for the regulation can be used a weighted average value between the value measured by the integrated sensor and a value received via bus by another KNX device.

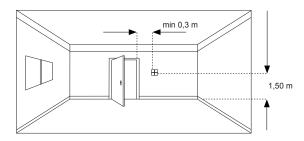


# Use as a room temperature controller


The pushbutton can be also used as a room temperature controller for single-stage heating/cooling systems with radiators, radiant panels and electrical heaters. As the

device has no user interface, it must receive the operational parameters by the bus (e.g. operating mode, seasonal conduction mode or a change of the setpoint value).

Main functional characteristics (room temperature controller)

- · Temperature measuring through integrated sensor with possibility of sending the value on the bus
- 2-point (on/off) or proportional (PWM or continuous) room temperature regulation
- · Seasonal conduction modes: heating and cooling with possibility of changeover via bus or automatic depending on the configuration
- Operating modes: comfort, standby, economy and building protection with different setpoint for heating and cooling
- · Automatic switching of the operating modes triggered by window opening/closing
- Weighted average of two temperature values
- · Temperature control alarm
- Anti-locking function for valves (hydronic systems)

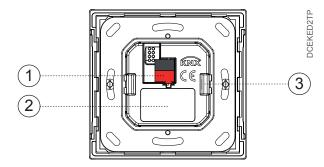

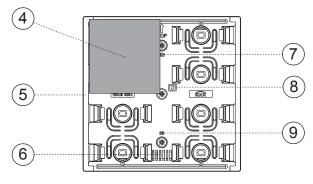

- 1) Connection terminal block for KNX bus line
- 2) Product label
- 3) Adapter 4) Rocker (in the example: 40 x 40 mm square type)
- 5) LED-lightguide \*
  6) Positioning of the temperature sensor \*
  7) Brightness sensor \*
- 8) Programming pushbutton 9) Programming LED

## Switching, display and connection elements


The device is equipped with four mechanisms for switching, four LEDs for each channel, a programming LED and a programming pushbutton and a terminal block for connection of the bus line.

# Switching elements

- · Pushbutton (8) for switching between the normal and programming operating modes
- One, two or four rockers (4) for independent switching of single or group of loads

## Display elements

- · Red LED (9) for indication of the active operating mode (on = programming, off = normal operation)
- Freely programmable LED with lightguide (5) e.g. for feedback status and orientation nightlight LED.

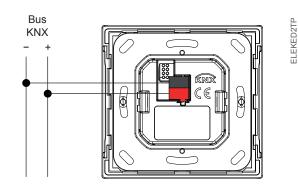



Warning! The electrical connection of the device can be carried out only by qualified personnel. The incorrect installation may result in electric shock or fire. Before making the electrical connections, make sure the power supply has been turned off.

## Connection of the KNX bus line

The connection of the KNX bus line is made with the terminal block (black/red) included in delivery and inserted into the slot of the housing.

## Characteristics of the KNX terminal block

- · spring clamping of conductors
- · 4 seats for conductors for each polarity
- terminal suitable for KNX bus cable with single-wire conductors and diameter between 0.6 and 0.8 mm
- recommended wire stripping approx. 5 mm
- color codification: red = + (positive) bus conductor, black = - (negative) bus conductor



Warning! In order to supply the KNX bus lines use only KNX bus power supplies (e.g. ekinex EK-AB1-TP or EK-AG1-TP). The use of other power supplies can compromise the communication and damage the devices connected to the bus.

# Configuration and commissioning

Configuration and commissioning of the device require the use of the ETS® (Engineering Tool Software) program V4 or later releases. These activities must be carried out according to the design of the building automation system done by a qualified planner.



Note. The configuration and commissioning of KNX devices require specialized skills. To acquire these skills, you should attend the workshops at KNX certified training centers

# Configuration

For the configuration of the device parameters the corresponding application program or the whole ekinex® product database must be loaded in the ETS program. For detailed information on configuration options, refer to the application manual of the device available on the website www.ekinex.com.

Product code	Application program (## = release)	Communica- tion objects (nr. max)	Group adresses (nr. max)
EK-ED2-TP	APEKED2TP##.knxprod	229	254
EK-E32-TP	APEKE32TP##.knxprod	229	254

# Commissioning

For commissioning the device the following activities are required:

- make the electrical connections as described above;
- turn on the bus power supply;
- switch the device operation to the programming mode by pressing the programming pushbutton located on the front side of the housing. In this mode of operation, the programming LED is turned on;
- download into the device the physical address and the configuration with the ETS® program.

At the end of the download the operation of the device automatically returns to normal mode; Now the bus device is programmed and ready for use.


## Reset of the device

To reset the device remove the bus connection by extracting the bus terminal from its seat. Keeping pressed the programming pushbutton, reinsert the bus terminal in his seat; the programming LED blinks fast. Release the programming button and remove the bus terminal again; the reset was carried out. Now you need to address and configure again the device via ETS.



**Warning!** The reset restores the device back to the state of delivery from the factory. The address and the value of the parameters set during configuration will be lost.

# **Dimensions [mm]**

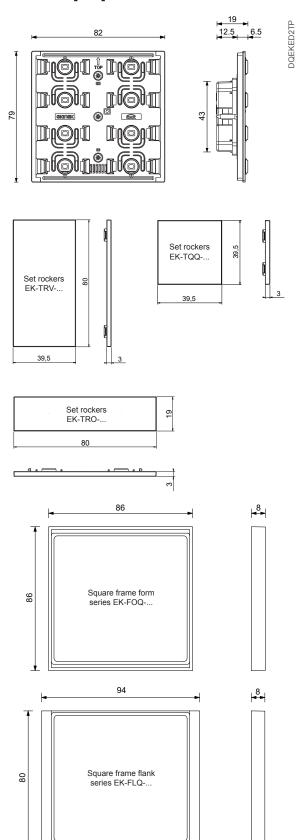

#### **Marks**

- KNX
- CE: the device complies with the Low Voltage Directive (2014/35/EU) and the Electromagnetic Compatibility Directive (2014/30/EU). Tests carried out according to EN 50491-5-1:2010, EN 50491-5-2:2010

#### **Maintenance**

The device is maintenance-free. To clean use a dry cloth. It must be avoided the use of solvents or other aggressive substances

#### **Disposal**



At the end of its useful life the product described in this datasheet is classified as waste from electronic equipment in accordance with the European Directive 2012/19/EU (WEEE recast), and cannot be disposed together with the municipal undifferentiated solid waste.



**Warning!** Incorrect disposal of this product may cause serious damage to the environment and human health. Please be informed about the correct disposal procedures for waste collecting and processing provided by local authorities.

# **Documentation**

This datasheet refers to the release A1.0 of the Ekinex® devices EK-ED2-TP... and EK-E32-TP..., and is available for download at www.ekinex.com as a PDF (Portable Data Format) file.

File name	Device release	Updating
STEKED32TP_EN.pdf	A1.0	09 / 2018

#### Warnings

- Installation, electrical connection, configuration and commissioning of the device can only be carried out by qualified personnel in compliance with the applicable technical standards and laws of the respective countries
- Opening the housing of the device causes the immediate end of the warranty period
- In case of tampering, the compliance with the essential requirements of the applicable directives, for which the device has been certified, is no longer guaranteed
- ekinex® KNX defective devices must be returned to the manufacturer at the following address: Ekinex S.p.A. Via Novara 37, I-28010 Vaprio d'Agogna (NO)

#### Other information

- This datasheet is aimed at installers, system integrators and planners
- For further information on the product, please contact the ekinex® technical support at the e-mail address: support@ekinex.com or visit the website www.ekinex. com
- Each ekinex® device has a unique serial number on the label. The serial number can be used by installers or system integrators for documentation purposes and has to be added in each communication addressed to the EKINEX technical support in case of malfunctioning of the device
- ekinex<sup>®</sup> is a registered trademark of Ekinex S.p.A.

- KNX® and ETS® are registered trademarks of KNX Association cvba, Brussels
- © Ekinex S.p.A. 2018. The company reserves the right to make changes to this documentation without notice.
- \*) The programmable LEDs, the temperature sensor and the room temperature controller function are available for EK-ED2-TP-... versions only.